




Setup Strongback




Bulkheads and tmp. Frames in Place




Bottom Strip Planking in Place

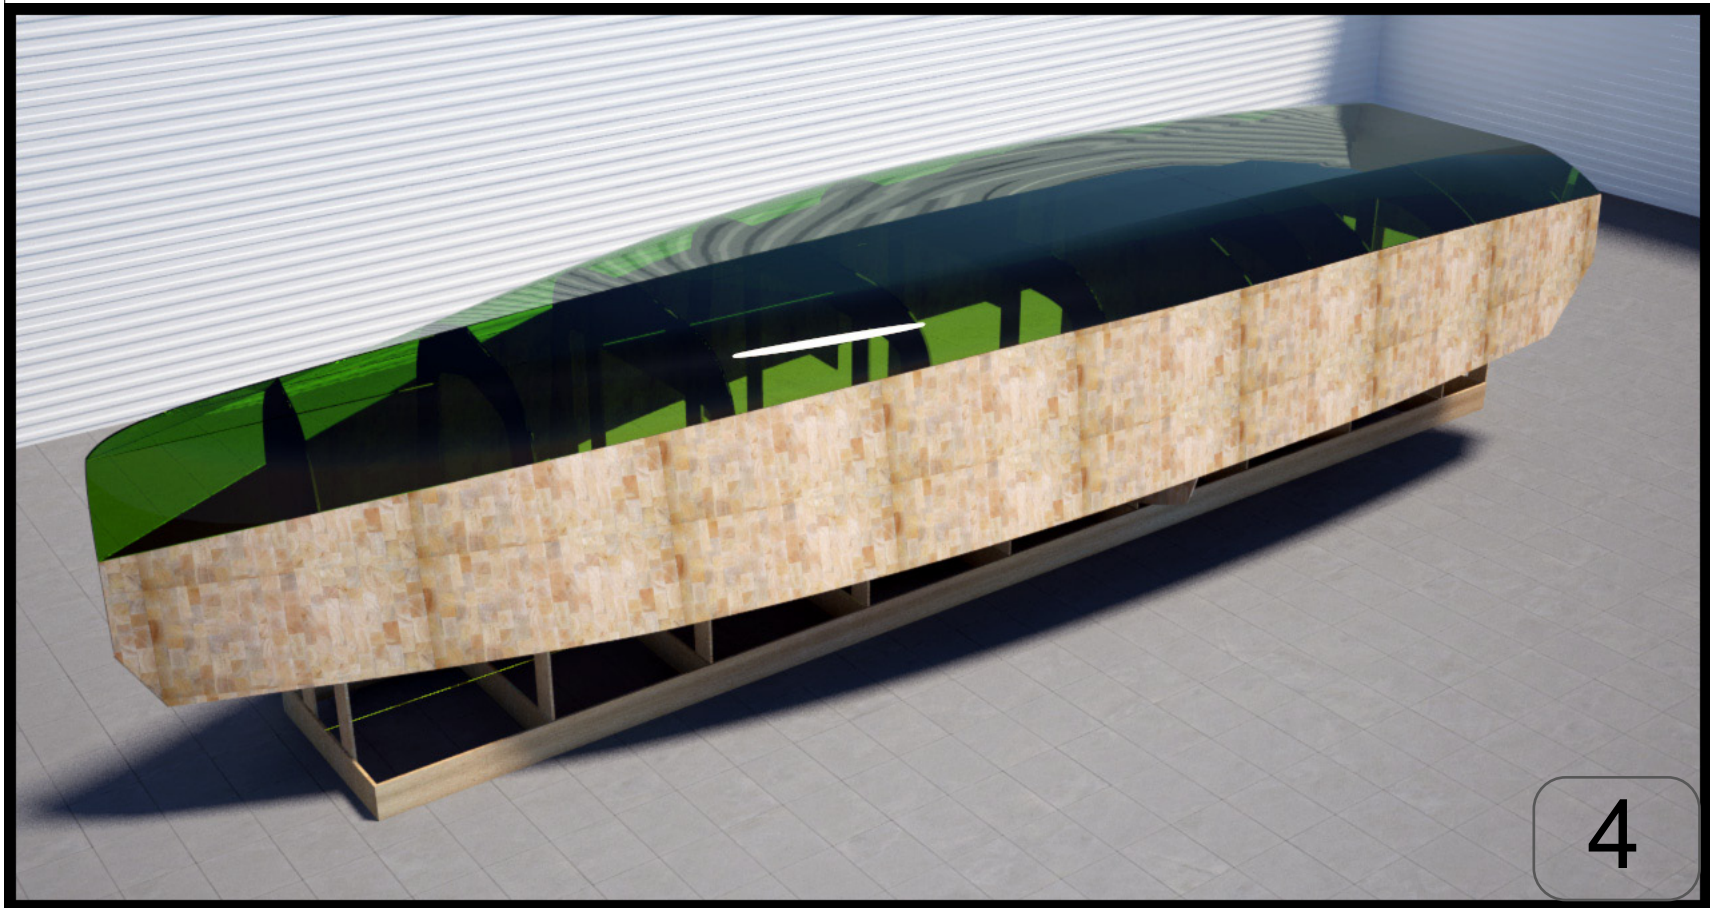


Side panels in place. When look OK glue to bulkheads.
Add plastic tape to panel edges and bulkheads, strip plank the mid sections, clean up and fill holes and gaps then glass the outside of strip planking.
Remove the strip sections clean up and glass the inside then glue back into position.

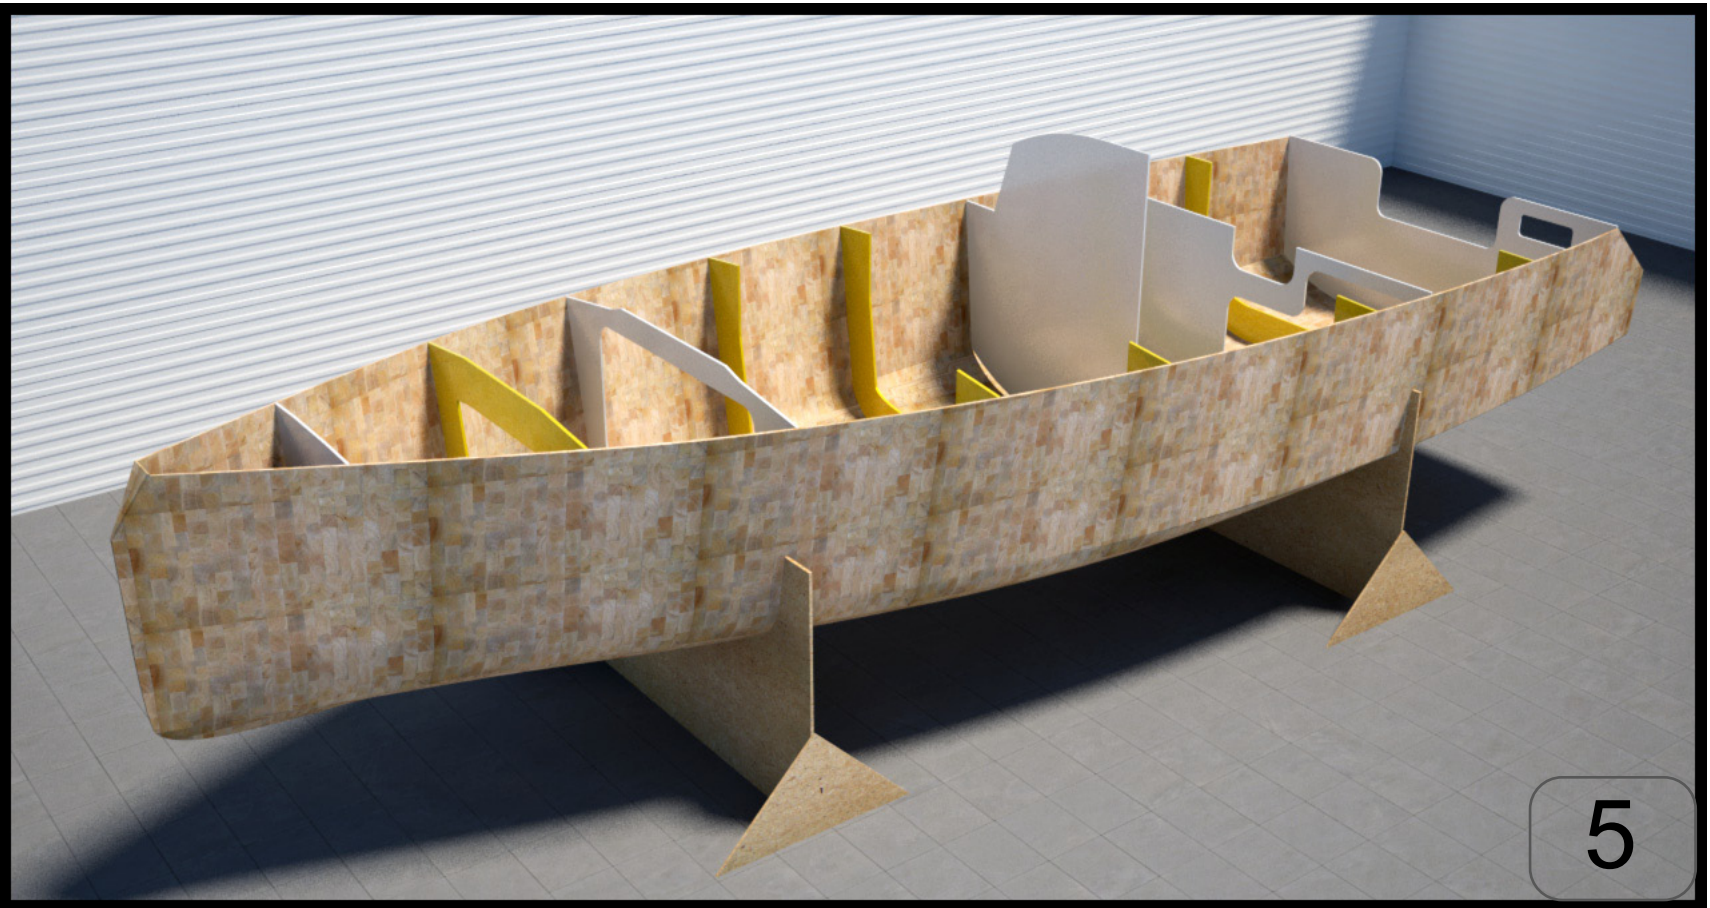


Make two cradles to suit at bulkhead positions.
Turn hull over.
Tape all inside joins.

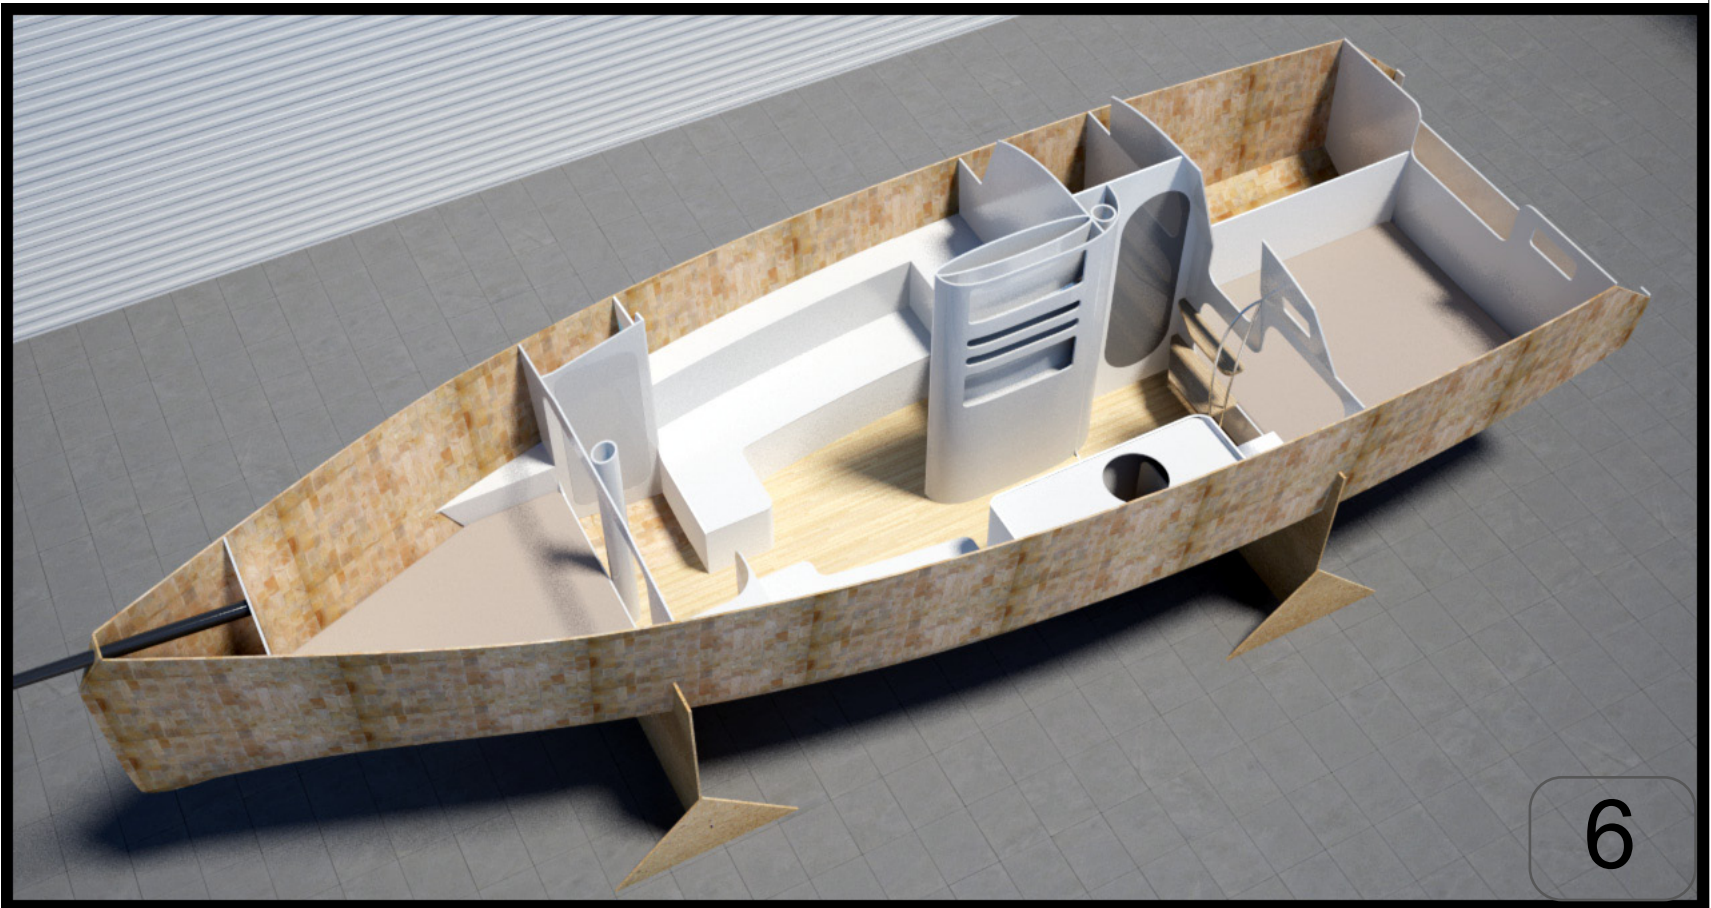


Add underfloor webs and keel case,
then add cabin sole (floor).
Add mast tubes.
Now build furniture from bottom to top and remember water tanks under bunk must be resin sealed well.

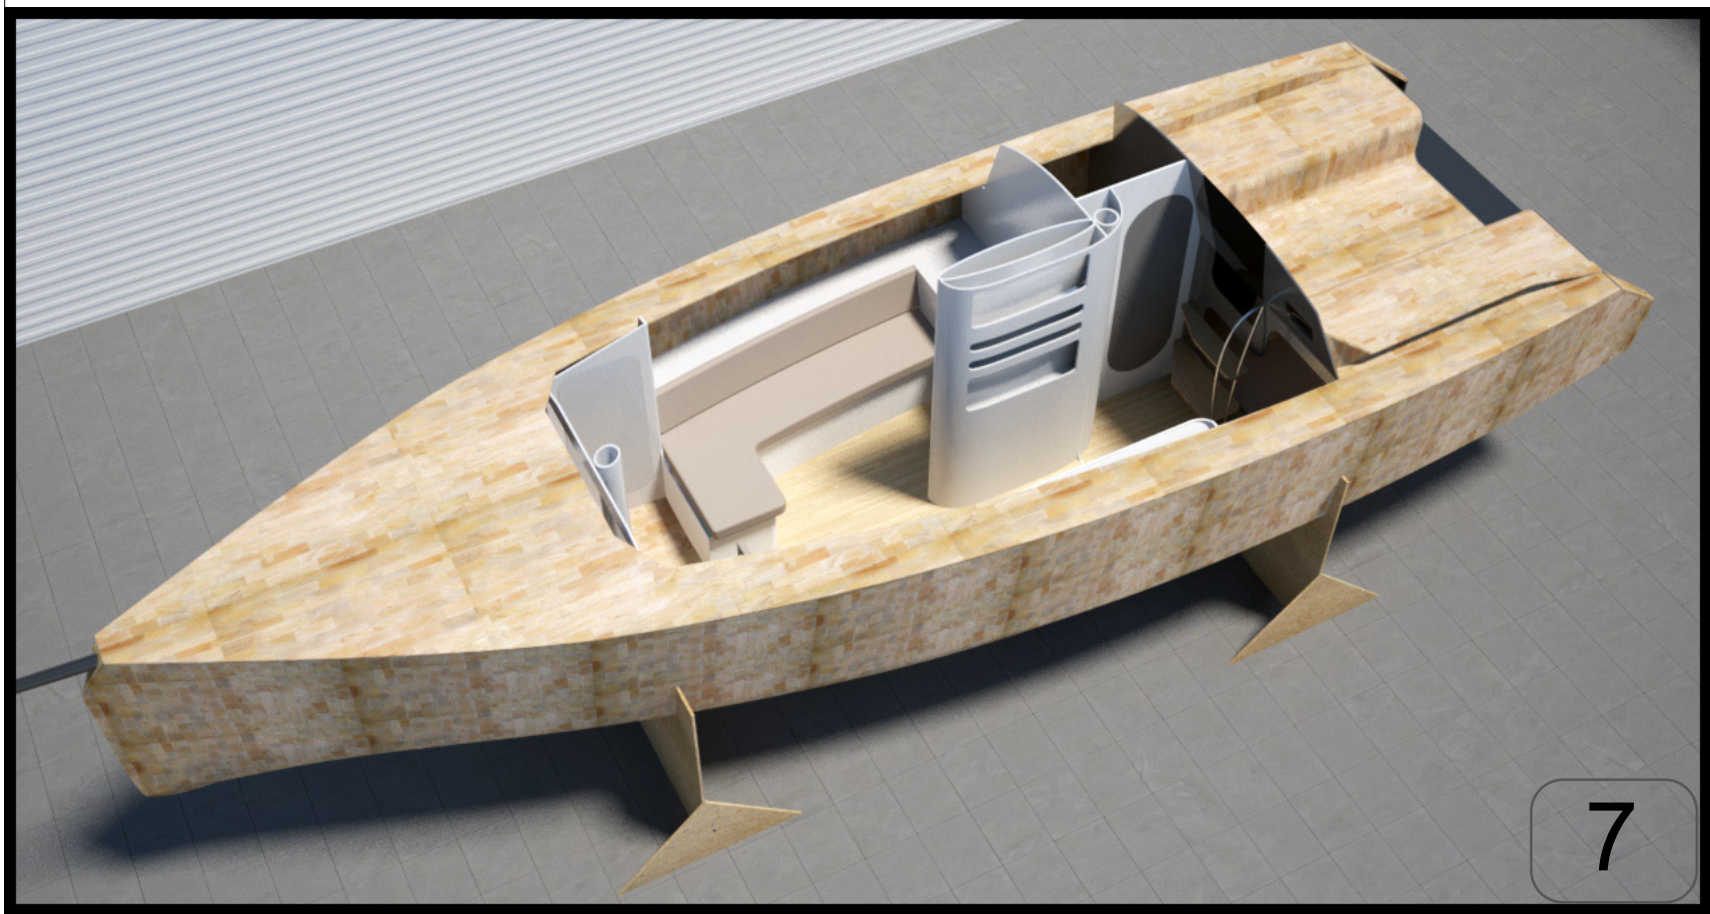

Add side decks, aft decks, fwd deck and cockpit.

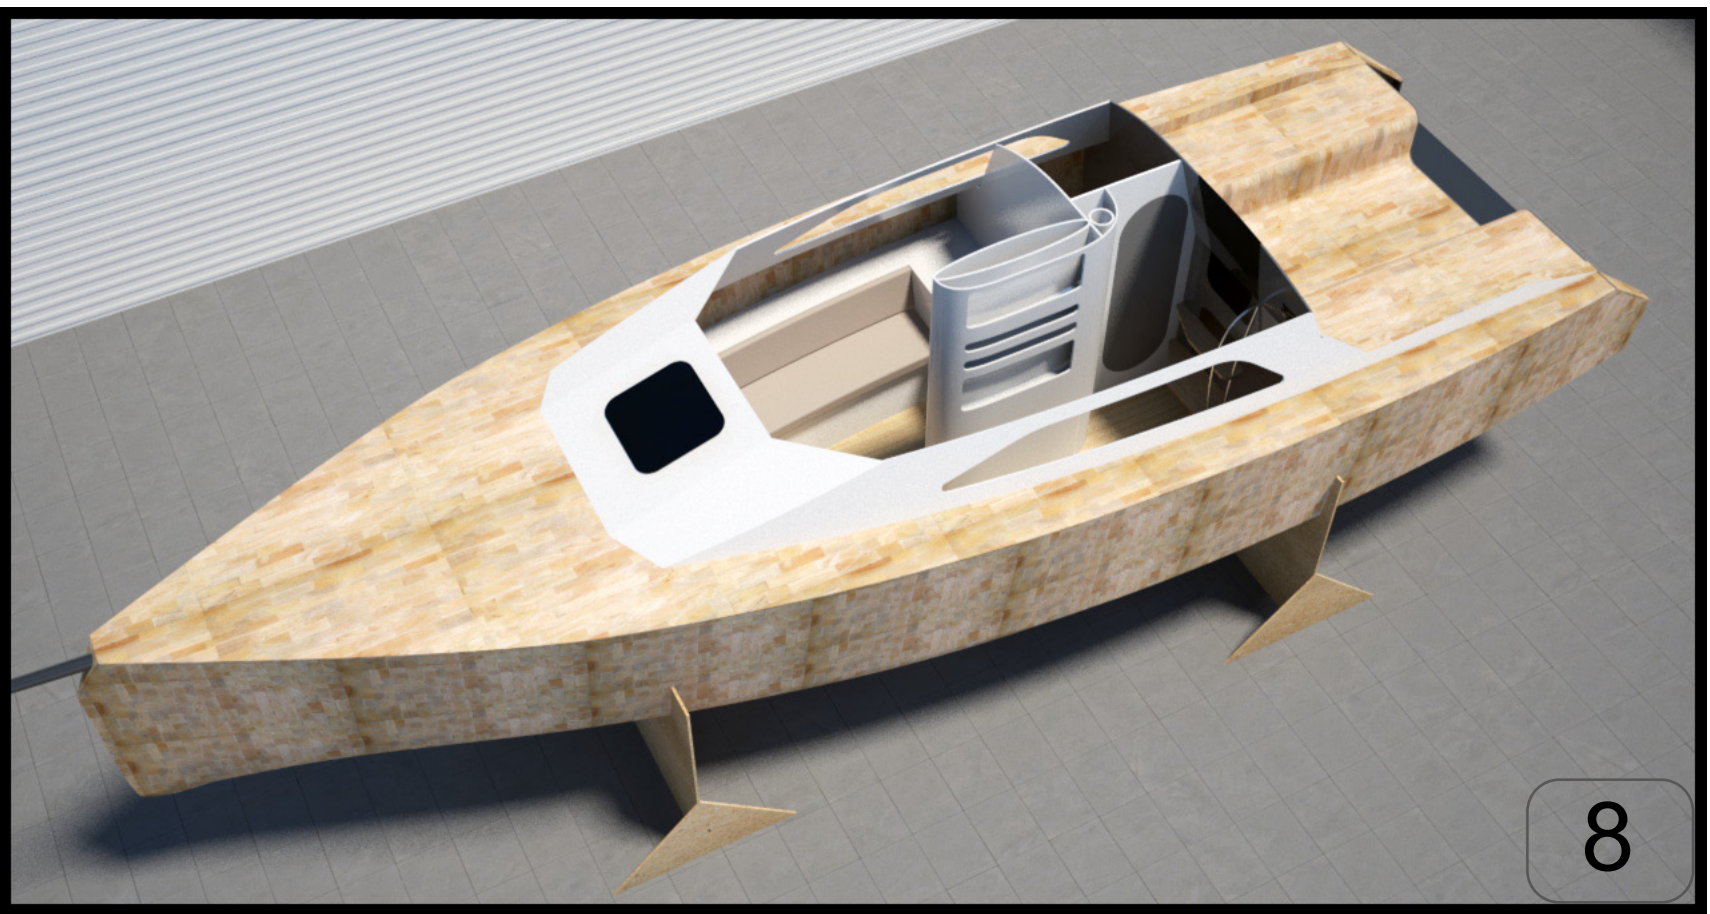

Add cabin sides
Then build cabin-top on mould (Using plots).
Fit and glue cabin top.

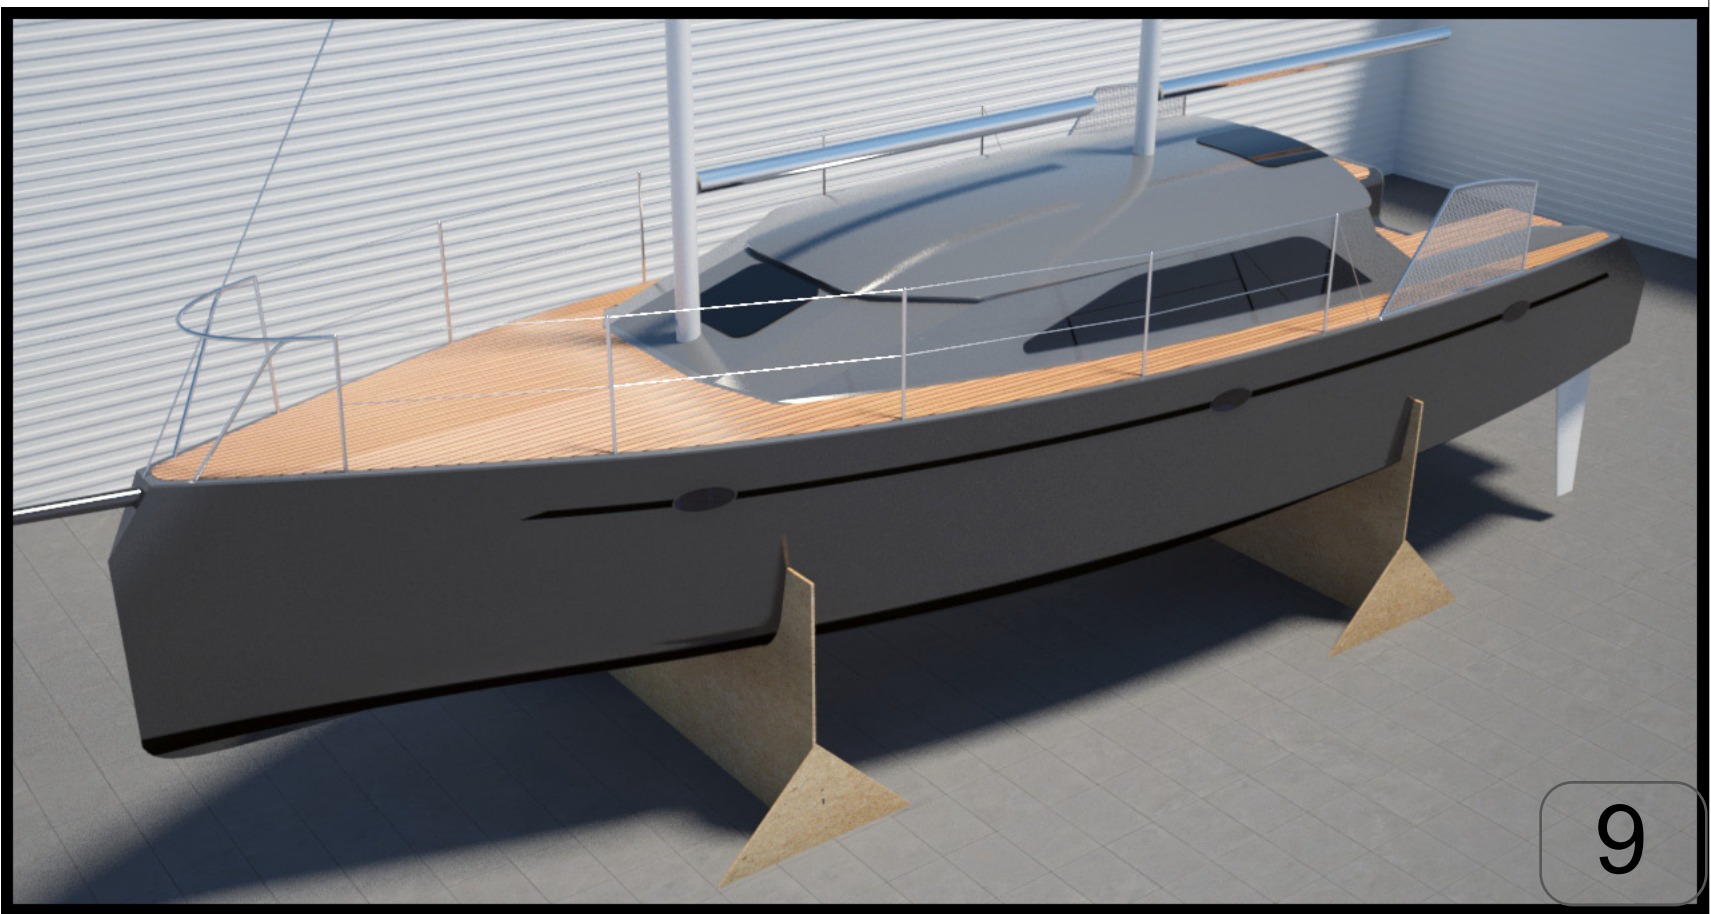

Now all the detail:
Cut hatches and ports, doors and windows.
Fit all deck hardware and core holes.
Fair, bog and high build then paint.
Next make masts and booms